

# PRODUCT CHARGE AND RUN TIMES

FOR CONSULTANT USE ONLY

**CHARGE TIME:** approximately how long it takes the USB-rechargeable product to complete a full battery cycle, from no charge to fully charged.

**RUN TIME (LOW)** and **RUN TIME (HIGH):** approximately how long the product will operate on a full charge at a respective speed.

## SEDUCTIVE SPOTLIGHT COLLECTION

PRODUCT	CHARGE TIME	RUN TIME (LOW)	RUN TIME (HIGH)
Double Feature	40 minutes	4 hours	2 hours
Encore	2 hours	2.25 hours	1.25 hours
Main Attraction	1.5 hours	5.25 hours	2.5 hours
Premiere	1 hour	4.25 hours	2.25 hours
Take A Bow	1 hour	4.25 hours	2 hours

## KALYPSO COLLECTION

PRODUCT	CHARGE TIME	RUN TIME (LOW)	RUN TIME (HIGH)
Aqua	1.5 hours	2 hours	1 hour
Kaia	40 minutes	1 hour	45 minutes
Maya	1.25 hours	1 hour	35 minutes
Mira	1.5 hours	3 hours	1 hours

## UPTOWN COLLECTION

PRODUCT	CHARGE TIME	RUN TIME (LOW)	RUN TIME (HIGH)
Park Avenue	2 hours	2 hours	1 hour
Soho	2 hours	1.5 hours	50 minutes
Tribeca	2 hours	2 hours	1 hour
Manhattan	2 hours	2 hours	1 hour

## SELFIE COLLECTION

PRODUCT	CHARGE TIME	RUN TIME (LOW)	RUN TIME (HIGH)
Do Not Disturb	2 hours	1.25 hours	45 minutes
Home Alone	1.5 hours	1.5 hours	1.25 hours

## WONDERLAND COLLECTION

PRODUCT	CHARGE TIME	RUN TIME (LOW)	RUN TIME (HIGH)
Candy Lips	1.5 hours	2.5 hours	-

## OTHER FAVORITES

PRODUCT	CHARGE TIME	RUN TIME (LOW)	RUN TIME (HIGH)
Stella	1.5 hours	2 hours	50 minutes

## PURE ROMANCE

PRODUCT CHARGE AND RUN TIMES (US/CAN 08-17)